



COMMANDCENTER

Installation & Quick Start Guide

1 Preparations

1.1 Content of delivery

- CommandCenter
- 2 Release tools for un-mounting

1.2 Location

The CommandCenter is a remote station for all Adatis door terminals and is only suitable for indoor use.

1.3 Interfaces

All connections are on the rear side mounted board of the device.

1.3.1 Ethernet, Power over Ethernet




Connect Ethernet plug. For Power-over-Ethernet supply use PoE-enabled network switch or PoE injector.


1.3.2 2Wire connection




If the device is ordered with the 2Wire option, connect the two wires to the 2Wire socket. For large distances pay attention for a sufficient cable-cross-section. (For further information see www.adatis.com)

1.3.3 Connection on the board

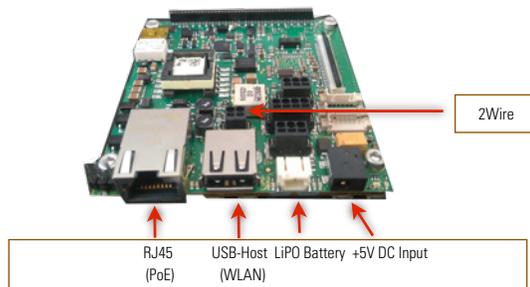

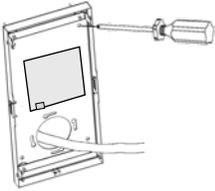

5 Tighten back housing.

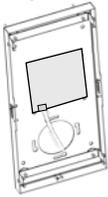 

6 Plug in cables to the board on the back housing.



7 Position the front centrally to the rear housing and push it so that they engage into the spring brackets.

3 Quick installation

On the CommandCenter the Adatis DoorKeeper app is preinstalled, which automatically recognizes all Adatis door terminals in the network.

3.1 Default settings


When delivered the CommandCenter is configured for Ethernet mode.




1 Home screen: Adatis launcher



2 Get access to device configuration via menu „settings“.

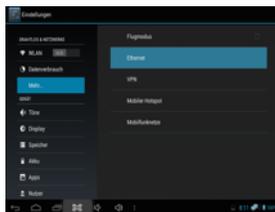

3 To enter the IP address, select „more“ in this menu and then „Ethernet“.

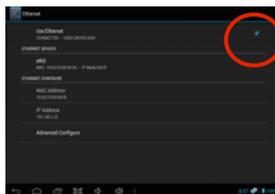



4 Make a hook at „use Ethernet“ to connect the CommandCenter to the network.



5 You can configure the IP address via the menu „advanced configure“. Select „DHCP“ for automatic mode or insert data manually.

3.2 DoorKeeper App

The door terminals, which should use the CommandCenter as remote station, can be selected in the DoorKeeper app.

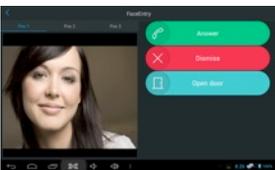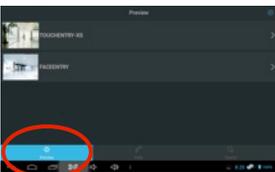

- 1 Start the Adatis DoorKeeper app via the launcher.
- 2 Click „search“ - „new doorstations“ to see all Adatis door terminals, which are registered in the same network.
- 3 Click the ‚+‘ button to add door terminals to the CommandCenter to receive their calls directly. They are shown in the list „Added Doorstations“.
- 4 You have access to the added terminals via the button „preview“.
- 5 If a call is made via the bell of one of the added door terminals, it can be received and accepted via the CommandCenter.

